


Typical Installation Example

PL20 & PL40 Separate Load/Charge Shunts

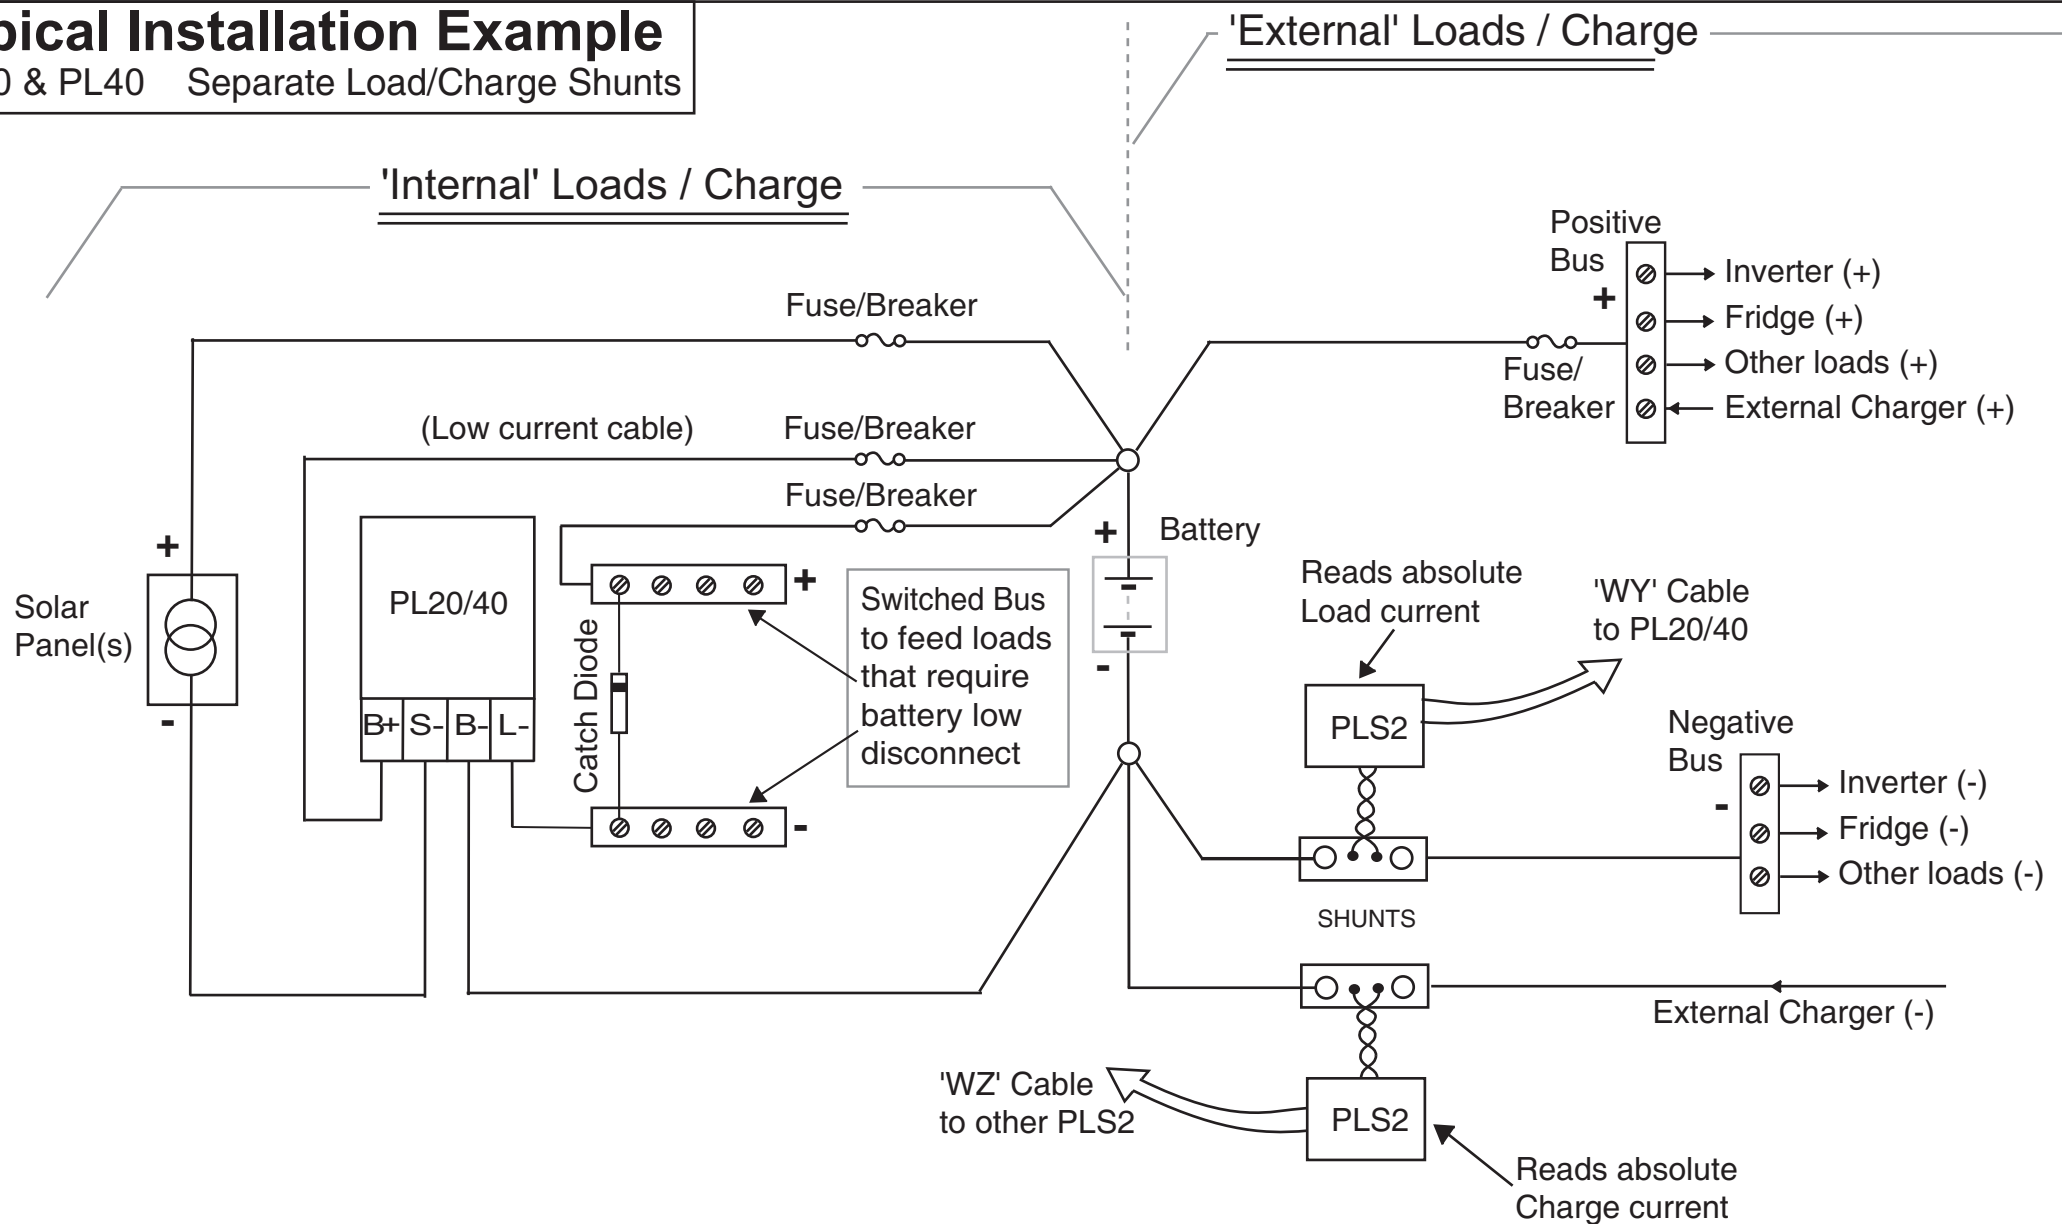

Note:
This configuration gives absolute external charge current reading in CHRG -> CEXT screen and absolute external load current reading in LOAD -> LEXT screen

This diagram is for reference only. Wiring and fuses etc. must be installed as specified by the relevant Australian Standards.