


Typical Installation Example

PL60

Single Shunt

'External' Loads / Charge

'Internal' Loads / Charge

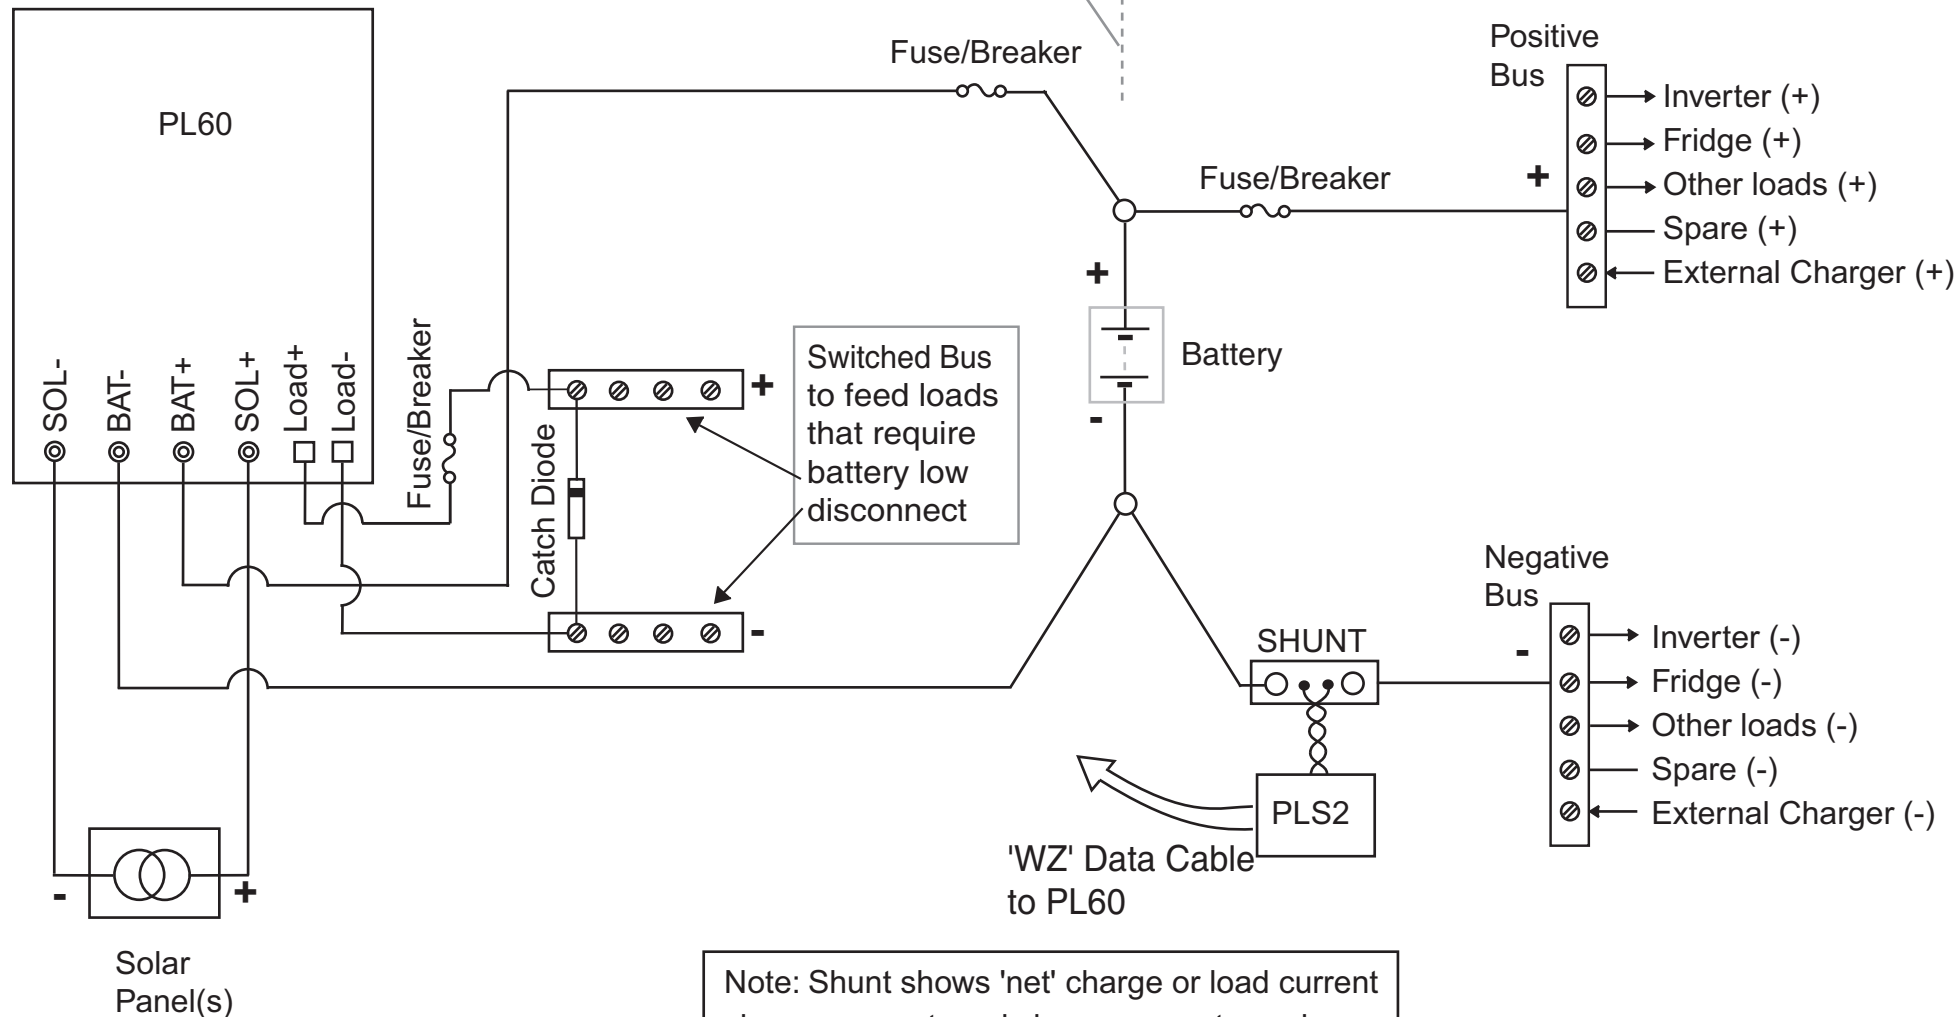

Note: Shunt shows 'net' charge or load current since some external charge current may be 'taken' by load and not go through shunt.

This diagram is for reference only. Wiring and fuses etc. must be installed as specified by the relevant Australian Standards.

Plasmatronics Pty Ltd

12/09/06 V1.0.2 JS

© Attribution-NoDerivs 2.5 License

<http://creativecommons.org/>