

CONTACT

If you have technical problems, first contact your installer. The following information is required in order to provide you with the necessary assistance:

- Inverter device type
- Inverter serial number
- Type and number of PV modules connected
- Blink code or display message of the inverter
- Optional equipment (e.g. communication devices)

**SMA Solar Technology AG**  
Sonnenallee 1  
34266 Niestetal, Germany  
www.SMA.de

**SMA Serviceline**  
Inverters: +49 561 9522 1499  
Communication: +49 561 9522 2499  
Fax: +49 561 9522 4699  
E-Mail: Serviceline@SMA.de

Installer contact



PV Inverter  
**SUNNY BOY 1200 / 1700**  
User Manual



SB12\_17-BEN101210 | IMEN-SB11\_17 | Version 1.0

EN

EXPLANATION OF SYMBOLS

Symbols on the Inverter

- Operation display.
- Ground fault or varistor defective. Please inform your installer.
- An error has occurred. Please inform your installer **immediately**.
- Tap to switch on the display light and switch to the next message.

Symbols on the Type Label

- Beware of dangerous electrical voltage. The inverter operates at high voltages. All electrical work on the inverter may be carried out by qualified personnel only. erfolgen.
- Beware of hot surface. The inverter can become hot during operation. Avoid contact during operation.
- Observe enclosed documentation.
- The inverter must not be disposed of with the household waste. Further disposal information can be found in the enclosed installation guide.
- CE mark. The inverter complies with the requirements of the applicable EC guidelines.
- RAL quality mark for solar products. The inverter complies with the requirements of the German Institute for Quality Assurance and Labeling.
- Direct Current (DC)
- Alternating current (AC)
- The inverter is protected against penetration by dust particles and water jets from any angle.
- The inverter has a transformer.

VISUAL INSPECTION, MAINTENANCE AND CLEANING

- Visual inspection**  
Check the inverters and the cables for visible external damage. Contact your installer if you find any defects. Do not perform any repair work yourself.
- Maintenance and Cleaning**  
Have your installer check for proper inverter operation at regular intervals.

GLOSSARY

- AC**  
Abbreviation for “Alternating Current”.
- DC**  
Abbreviation for "direct current".
- Derating**  
A controlled reduction in performance, usually dependent on component temperatures.
- Electronic Solar Switch (ESS)**  
The Electronic Solar Switch is part of the inverter's DC switch-disconnector. The Electronic Solar Switch must be securely inserted into the bottom of the inverter and may only be removed by qualified personnel.
- MPP (Maximum Power Point)**  
Operational point of the inverter, dependent on current / voltage of the PV generator. The actual position of the MPP changes constantly, depending on the level of solar irradiation and the cell temperature.
- PV**  
Abbreviation for photovoltaics.
- Varistor**  
The varistors protect the electronics in the inverter from atmospherically coupled energy peaks, such as those that can occur in the event of nearby lightning strikes.

Safety Precautions

**DANGER!**

**Electric shock caused by high voltage in the inverter.**

Even when no external voltage is present, there can still be high voltages in the device. The following work may be carried out by qualified personnel only:

- Electrical installation
- Repairs
- Modification

**CAUTION!**

**Risk of injury from touching the enclosure during operation.**

**Burns to the body.**

- Only touch lid and display during operation.

**NOTICE!**

**Overvoltage in the inverter if yellow LED flashes 4 times.**

**Destruction of the inverter.**

- Inform your installer immediately if the yellow LED starts flashing and the following display message appears.

!PU-Overvoltage!  
!Disconnect DC!

LED Modes


State		Description	Function
<div><div><div><div><div><div></div></div></div><div><div><div></div></div></div><div><div><div></div></div></div></div><div><div><div></div></div></div><div><div><div></div></div></div></div></div> <div>All LEDs are on</div>	Initialization	The inverter is initializing.	
<div><div><div><div><div><div></div></div></div><div><div><div></div></div></div><div><div><div></div></div></div></div><div><div><div></div></div></div><div><div><div></div></div></div></div></div> <div>All LEDs are off</div>	Deactivation	The inverter has detected a DC input voltage that is too low for grid feeding.	
<div><div><div><div><div><div></div></div></div><div><div><div></div></div></div><div><div><div></div></div></div></div><div><div><div></div></div></div><div><div><div></div></div></div></div></div> <div>Green LED is permanently on</div>	Feeding Operation	The inverter is feeding power into the public grid.	
<div><div><div><div><div><div></div></div></div><div><div><div></div></div></div><div><div><div></div></div></div></div><div><div><div></div></div></div><div><div><div></div></div></div></div></div> <div>Green LED is flashing</div>	Waiting, Grid Monitoring	The inverter monitors the grid and waits for the DC voltage to reach a certain level so that it can start feeding the grid.	
	Stop	Interruption of operation.	
	Derating	Overtemperature in the inverter.	
<div><div><div><div><div><div></div></div></div><div><div><div></div></div></div><div><div><div></div></div></div></div><div><div><div></div></div></div><div><div><div></div></div></div></div></div> <div>Red LED is glowing</div>	Warning	A grounding error has occurred, or one of the thermally monitored varistors on the DC input side is defective. Please inform your installer.	
<div><div><div><div><div><div></div></div></div><div><div><div></div></div></div><div><div><div></div></div></div></div><div><div><div></div></div></div><div><div><div></div></div></div></div></div> <div>Yellow LED is glowing continuously</div>	Disturbance	The inverter is operating in "Operation constantly disabled" mode. This can have several causes. Please inform your installer.	
<div><div><div><div><div><div></div></div></div><div><div><div></div></div></div><div><div><div></div></div></div></div><div><div><div></div></div></div><div><div><div></div></div></div></div></div> <div>Yellow LED is flashing</div>	Disturbance	The inverter displays a disturbance. This can have several causes. Please inform your installer.	

Measuring Channels

If your inverter is equipped with a communication component, then numerous measuring channels and messages can be transmitted for diagnosis.

Measuring channel	Description
Error	Identification of the current disturbance / error.
E-total	Total amount of feeding-in energy
Event-Cnt	Number of events that have occurred
Fac	Grid frequency
h-On	Total number of operating hours
h-total	Total number of grid-feeding operational hours
Iac	Grid current
Ipv	DC current
Mode	Display of the current operating mode
Pac	Generated AC power
Power On	Total number of grid switch-ons
Riso	Insulation resistance of the PV system to the power supply line
Serial number	Inverter serial number
Vac	Grid voltage
Vpv	PV input voltage
Vpv-Setpoint	PV target voltage

Product Overview

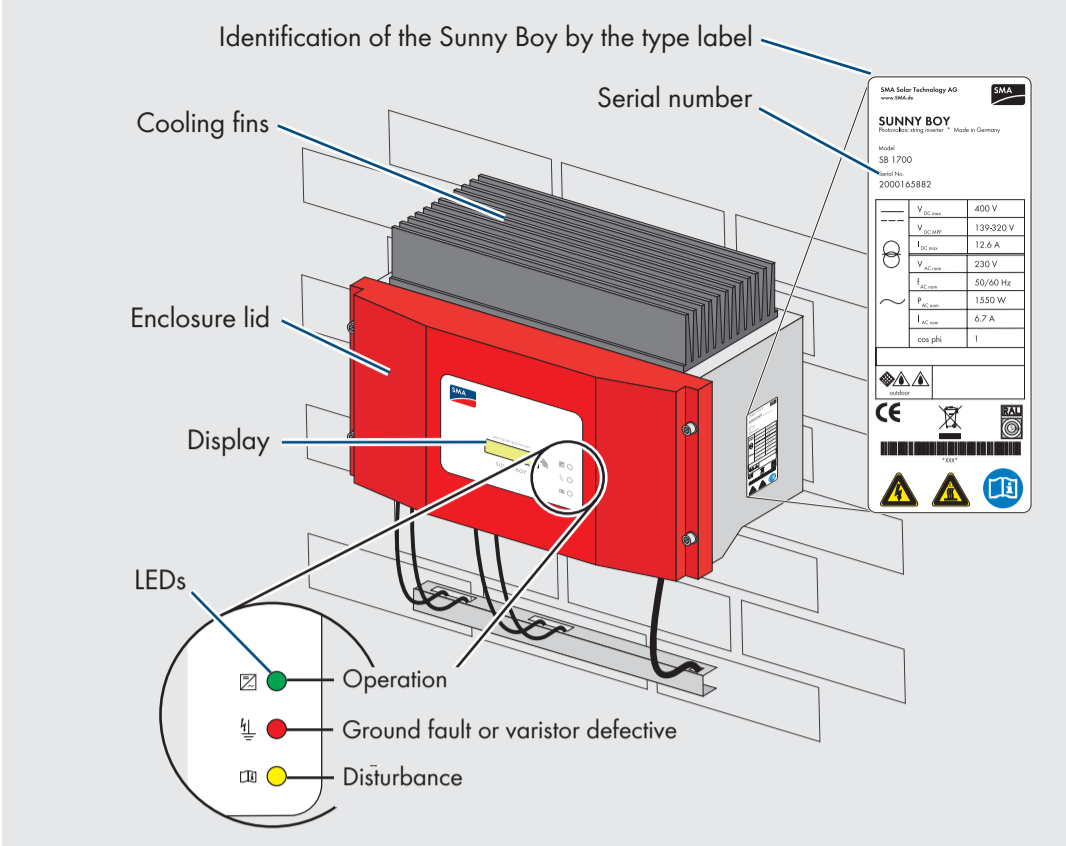

Display

**Operation**

The display shows current values of your system. The displayed values are updated every 5 seconds. The display is operated by tapping on it.

903W  
360V

**Tap once**  
The backlight is switched on. After 2 minutes, the illumination switches off automatically.

**Tap again**  
The display switches to the next notification.

**Display messages**

**Operation**

E-today Mode0WhMPP

Power produced on the current day  
Operating state

PacVpv903W360V

Current feed-in power  
PV generator voltage

E-totalh-total0Wh0h

Power produced so far  
Total number of grid-feeding operational hours

**Disturbance**

In the event of a disturbance, the inverter will display the status "Disturbance" and an error message. Please inform your installer. The following messages will be issued:

E-today ModeDisturbance0Wh

Power produced on the current day  
Operating state "Disturbance"

DisturbanceVac-Bfr

Operating state  
Error message

at: present:261V245V

Measured value at time of disturbance  
Current measured value (only displayed if a measured value is responsible for the disturbance)

**DC overvoltage**

!PU-Overvoltage!  
!Disconnect DC!

The DC input voltage connected to the inverter is too high. Please inform your installer **immediately**.

Status Messages

Your inverter can be in various operating modes. These are displayed as status messages, which can vary according to the method of communication.

Message	Description
Derating	Overtemperature in the inverter. The inverter will reduce its output to prevent overheating. To avoid unnecessary output losses, the design of the PV plant should be checked. Please inform your installer.
Disturbance	Disturbance. This message appears for reasons of safety and prevents the inverter from connecting to the grid. Please inform your installer.
Error	An error has been detected. Please inform your installer.
grid mon.	Grid monitoring This message appears during the startup phase, before the inverter connects to the grid; it usually appears in the morning and evening when there is little solar irradiation an after an error has occurred.
MPP	The inverter is operating in MPP mode. MPP is the standard display message when operating under normal irradiation conditions.
Off Grid	The inverter is in "Island" mode. This mode has been specially conceived for operation in an off-grid power system with a Sunny Island as grid controller.
offset	Offset adjustment of measurement electronics.
Riso	Measurement of the insulation resistance of the PV system.
Stop	Interruption of operation.
V-Const	Constant voltage operation.
waiting	The switch-on conditions are not (yet) fulfilled.